


VORTAC FWA 117.8 Chan 125	APP CRS 145°	Rwy Ldg TDZE Apt Elev	8001 802 815
---	------------------------	-----------------------------	---



VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75

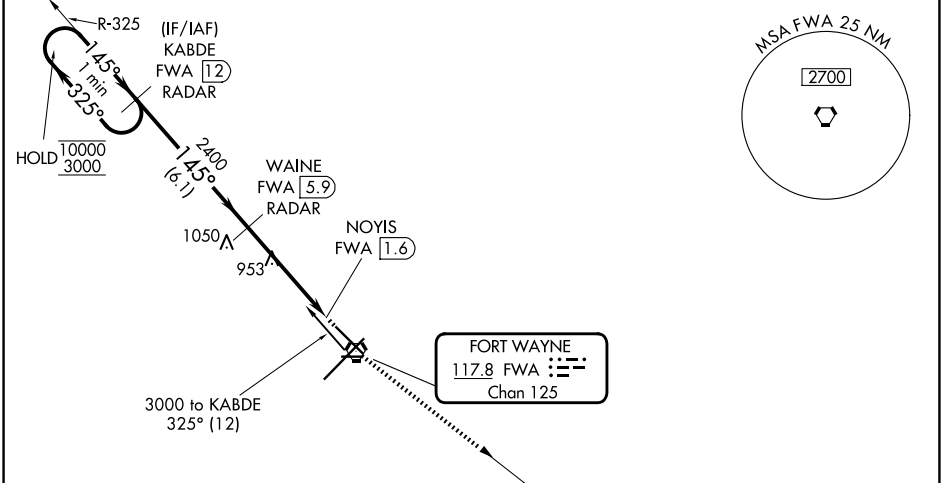

Procedure NA for arrival on FWA VORTAC airway radials 285 CW 022.

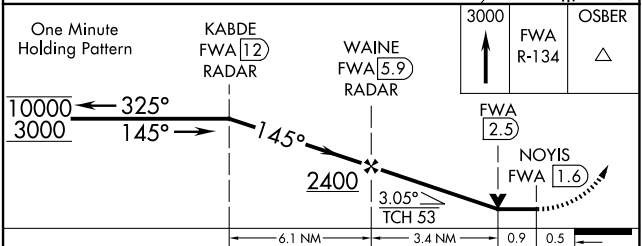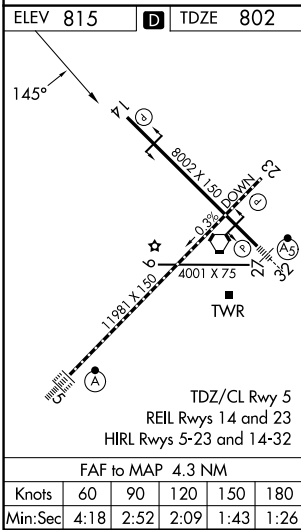

CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1 $\frac{3}{8}$ 478 (500-1 $\frac{3}{8}$)	1280-1 $\frac{1}{2}$ 478 (500-1 $\frac{1}{2}$)	1280-1 $\frac{3}{4}$ 478 (500-1 $\frac{3}{4}$)
CIRCLING	1300-1	485 (500-1)	1360-1 $\frac{1}{2}$ 545 (600-1 $\frac{1}{2}$)	1520-2 $\frac{1}{4}$ 705 (800-2 $\frac{1}{4}$)	1520-2 $\frac{1}{2}$ 705 (800-2 $\frac{1}{2}$)

EC-2, 16 APR 2026 to 14 MAY 2026

EC-2, 16 APR 2026 to 14 MAY 2026