

SAPEE ONE DEPARTURE (RNAV) (SAPEE1.SAPEE)

ENID, OKLAHOMA

ATIS ★ 115.4 263.15
 CLNC DEL
 225.4
 GND CON
 121.675 289.4
 VANCE TOWER ★
 124.05 259.1
 VANCE DEP CON
 120.525 306.3

WALDI
 13,000

RNAV1-GPS

| Rwy | Knots | 60 | 120 | 180 | 240 | 300 | 360 |
|-----|----------|-----|-----|-----|------|------|------|
| 17R | V/V(fpm) | 228 | 456 | 684 | 912 | 1140 | 1368 |
| 17C | V/V(fpm) | 229 | 458 | 687 | 916 | 1145 | 1374 |
| 35L | V/V(fpm) | 282 | 564 | 846 | 1128 | 1410 | 1692 |
| 35C | V/V(fpm) | 283 | 566 | 849 | 1132 | 1415 | 1698 |

ATC Climb Rate to 13,000

TOP ALTITUDE:
13,000

SAPEE
 13,000

1535


JENOS

KIMSH

ZEVUV

MOKNE

CAXOT

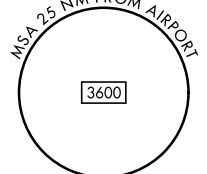

EMERG SAFE ALT 100 NM 4800



DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 17C: Climb direct CAXOT, then right turn direct JENOS, then climbing track 350° to cross SAPEE at or below 13,000, thence...

TAKEOFF RWY 17R: Climb direct MOKNE, then right turn direct JENOS, then climbing track 350° to cross SAPEE at or below 13,000, thence...

TAKEOFF RWY 35L: Climb direct KIMSH, then climbing left turn direct to cross SAPEE at or below 13,000, thence...

TAKEOFF RWY 35C: Climb direct ZEVUV, then climbing left turn direct to cross SAPEE at or below 13,000, thence...

WALDI TRANSITION (SAPEE1.WALDI): ...from over SAPEE climbing track 350° to cross WALDI at 13,000.

SAPEE ONE DEPARTURE (RNAV) (SAPEE1.SAPEE)

ENID, OKLAHOMA

VANCE AFB (KEND)