

**TETLIN** (3T4) 1 S UTC-9(-8DT) N63°07.48' W142°31.11'

1671 B NOTAM FILE ORT

**RWY 08-26:** 3300X75 (GRVL) MIRL

**RWY 08:** Brush.

**RWY 26:** Brush.

**SERVICE:** LGT ACTIVATE MIRL Rwy 08-26 —CTAF.

**AIRPORT REMARKS:** Unattended. Rwy condition not monitored, recommend visual inspection prior to using. Skis not recommended.

**AIRPORT MANAGER:** 907-883-5128

**COMMUNICATIONS:** CTAF 122.9

**RADIO AIDS TO NAVIGATION:** NOTAM FILE ORT.

**NORTHWAY (H) (H) VORTACW** 116.3 ORT Chan 110 N62°56.83'

W141°54.76' 286° 19.7 NM to fld. 1779/17E.

TACAN AZIMUTH unusable:

342°-037° byd 30 NM blo 10,500'


DME unusable:

342°-037° byd 30 NM blo 10,500'

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Northway FSS dial 1-800-478-6611.

**ANCHORAGE**

L-1A, 3E

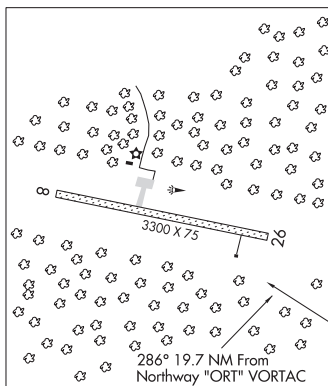

**THOMPSON PASS** (See VALDEZ on page 256)

**THORNE BAY SPB** (KTB) 0 NW UTC-9(-8DT) N55°41.28' W132°32.20'

**KETCHIKAN**

00 NOTAM FILE KTN

**WATERWAY NW-SE:** 5000X2000 (WATER)

**AIRPORT REMARKS:** Unattended. Opr area in Thorne Bay. Be alert: sea otters also use SPB ramp/tie-down area.

**AIRPORT MANAGER:** 907-204-0815

**COMMUNICATIONS:** CTAF 122.9

**RADIO AIDS TO NAVIGATION:** NOTAM FILE ANN.

**ANNETTE ISLAND (H) (H) VORW/DME** 117.1 ANN Chan 118

N55°03.62' W131°34.70' 298° 50.0 NM to fld. 184/21E.

VOR unusable:

000°-100° byd 11 NM blo 12,000'

000°-100° byd 15 NM

000°-100° byd 9 NM blo 6,500'

120°-130° byd 37 NM blo 6,000'

290°-320° byd 32 NM blo 7,000'

290°-320° byd 37 NM blo 9,000'

345°-000° byd 20 NM

DME unusable:

000°-100° byd 11 NM blo 12,000'

000°-100° byd 15 NM

000°-100° byd 9 NM blo 6,500'

120°-130° byd 37 NM blo 6,000'


290°-320° byd 32 NM blo 7,000'

290°-320° byd 37 NM blo 9,000'

345°-000° byd 20 NM

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Ketchikan FSS dial 1-800-478-3500. For a LC to Juneau FSS dial

789-7380.

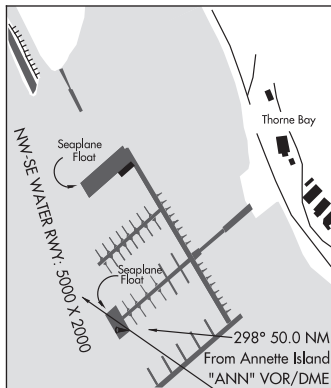

**TIBBETTS** (See NAKNEK on page 177)