

AMBLER (AFM)(PAFM) 1 N UTC-9(-8DT) N67°06.37' W157°51.43'

293 B NOTAM FILE AFM

RWY 01-19: 4000X75 (GRVL-DIRT) MIRL 0.5% up N

RWY 01: PAPI(P4R)—GA 3.0° TCH 25'. Trees.

RWY 19: Trees.

RWY 10-28: 2400X60 (GRVL-DIRT) MIRL 1.1% up W

SERVICE: LGT ACTIVATE PAPI Rwy 01; MIRL Rwy 01-19 and Rwy 10-28; windsock lgts—CTAF. ACTIVATE rotating bcn—CTAF.

AIRPORT REMARKS: Unattended. Rwy conditions not monitored, recommend visual inspection prior to using. Caribou invof rwys. Rwy 01-19 rwy surface is compacted gravel, rock and dirt. Rwy 10-28 rwy surface is compacted gravel, rock and dirt. Cold temperature airport. Altitude correction required at or below -36C. Rwy 01-19 crowns in center and no line of sight between rwy ends. Rwy 10-28 slopes uphill east to west approximately 80'.

AIRPORT MANAGER: 907-442-3147

WEATHER DATA SOURCES: AWOS-3P 132.1 (907) 621-7610. (WX CAM)

COMMUNICATIONS: CTAF 122.7

RCO 122.0 (KOTZEBUE RADIO)


ANCHORAGE CENTER APP/DEP CON 119.2

RADIO AIDS TO NAVIGATION: NOTAM FILE OTZ.

KOTZEBUE (H) (H) VOR/DME 115.7 OTZ Chan 104 N66°53.14'

W162°32.40' 066° 111.1 NM to fld. 121/15E.

COMM/NAV/WEATHER REMARKS: For a LC to Kotzebue FSS dial 907-442-3310. For a toll free call to Kotzebue FSS dial 1-800-478-7460. For a toll free call to Fairbanks FSS dial 1-866-248-6515.

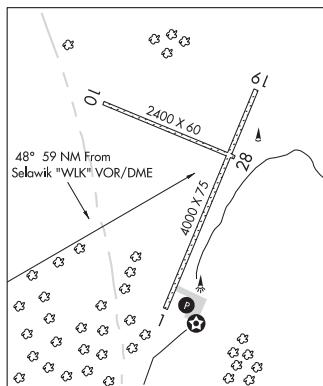

FAIRBANKS

H-1A, L-4I

IAF

AMERICAN CREEK (80A) 0 N UTC-9(-8DT) N65°06.24' W151°10.63'

513 NOTAM FILE FAI

RWY 02-20: 1500X70 (TURF-GRVL) 1.3% up N

RWY 02: Tree.

RWY 20: Tree.

AIRPORT REMARKS: Unattended. Be alert winds erratic. Be alert, rwy used as road by mining equipment. Heavy equipment and drag line boom invof rwy, recommend flyby before ldg. No line of sight between rwy ends. Rocks up to 6" in diameter.

AIRPORT MANAGER: 907-451-2740

COMMUNICATIONS: CTAF 122.9

FAIRBANKS

ANAKTUVUK PASS (AKP)(PAKP) 0 SE UTC-9(-8DT) N68°08.02' W151°44.60'

2106 B NOTAM FILE AKP

RWY 02-20: 4800X100 (GRVL) MIRL 1.1% up NE

RWY 02: REIL. PAPI(P2L)—GA 3.0° TCH 41'. Brush.

RWY 20: REIL. PAPI(P2L)—GA 3.0° TCH 40'. Brush.

SERVICE: LGT ACTVT MIRL Rwy 02-20, REIL and PAPI Rwys 02 and 20, and rotating bcn—CTAF.

AIRPORT REMARKS: Attended continuously. Rwy 02-20 ALERT: Lctd in valley, high trrn all quads, exp turb wind, rcmd visual insp prior to use. Cold temperature airport. Altitude correction required at or below -31C.

AIRPORT MANAGER: (907) 852-0489

WEATHER DATA SOURCES: AWOS-3P 135.75 (907) 661-3020. (WX CAM)

COMMUNICATIONS: CTAF/UNICOM 122.8

ANAKTUVUK PASS RCO 122.15 (FAIRBANKS RADIO)

ANCHORAGE CENTER APP/DEP CON 124.6 352.0

RADIO AIDS TO NAVIGATION: NOTAM FILE BTT.


BETTLES (H) (H) VOR/DME 116.0 BTT Chan 107 N66°54.30'

W151°32.15' 336° 74.1 NM to fld. 637/20E.

VOR AZIMUTH & DME unusable:

047°-077° byd 24 NM

COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.

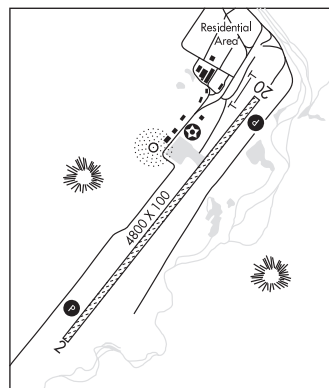

POINT BARROW

H-1A, L-4I

IAF